

Quick Start Guide



TransSteel 2200

 MIG/MAG

 TIG

 STICK



[manuals.fronius.com/
html/4204260241](https://manuals.fronius.com/html/4204260241)



**OPERATING
MANUAL**





DE: Vor Arbeiten mit dem Gerät, alle beiliegenden und online zur Verfügung gestellten Dokumente lesen und verstehen!

CS: Před zahájením práce s přístrojem je třeba přečíst všechny přiložené a online dokumenty a porozumět jejich obsahu!

EN: Before carrying out any work with the device, ensure that you have read and understood all the documents provided as well as those available online!

ES: Antes de trabajar con el equipo, leer y comprender todos los documentos adjuntos y puestos a disposición en línea!

ET: Enne seadmega tööde alustamist tuleb läbi lugeda kõik kaasasolevad ja veebis saadaolevad dokumendid ning need endale arusaadavaks teha!

FR: Ne travailler avec l'appareil que lorsque tous les documents joints et mis à disposition en ligne ont été lus et compris!

HR: Prije rada s uređajem s razumijevanjem pročitatje i shvatite sve priložene dokumente i dokumente koji su na raspolaganju na mreži!

IT: Prima di lavorare con l'apparecchio, leggere e comprendere tutta la documentazione allegata e disponibile online!

NO: Les igjennom og forstå alle dokumenter som følger med apparatet eller er gjort tilgjengelige online for det før du tar apparatet i bruk!

NL: Voordat u met het apparaat aan de slag gaat, moet u alle bijgevoegde en online beschikbare documenten lezen en de inhoud ervan begrijpen!

PL: Przed rozpoczęciem pracy z urządzeniem należy dokładnie przeczytać i zrozumieć treść całej dokumentacji dołączonej do urządzenia i dostępnej online!

PB: Antes de trabalhar com o aparelho, ler e compreender todos os documentos anexos e os documentos disponibilizados online!

RO: Înainte de efectuarea oricăror lucrări cu aparatul citiți și înțelegeți toate documentele atașate și disponibile online!

SK: Pred prácami so strojom si musíte prečítať a porozumieť všetkým priloženým a on-line dokumentom, ktoré sú k dispozícii!

TR: Cihazla çalışmaya başlamadan önce tüm ekte bulunan ve online olarak sunulan dokümanları okuyun ve anlayın!

HU: A készülékkal végzett munka előtt olvassa el és értse meg az összes mellékelt és online rendelkezésre bocsátott dokumentumot!



RU: Перед проведением работ с устройством внимательно ознакомьтесь со всеми предоставленными документами, а также теми, что доступны в Интернете!

JA: その製品を使用する前に、同梱されている文書およびオンライン文書を読んで、理解する必要があります。

ZH: 在使用该设备开展任何工作之前，请确保已阅读并理解所提供的全部在线文件。


UK: Перед виконанням будь-яких робіт із використанням пристрою уважно ознайомтеся з усією документацією, що надається разом із пристроєм, а також доступна на нашому веб-сайті.

1

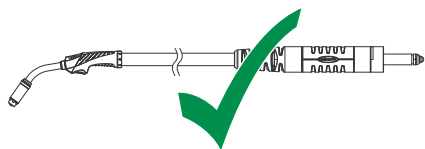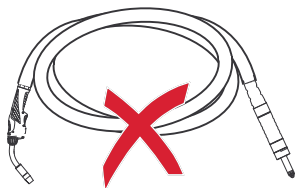


2



MTG 2100S

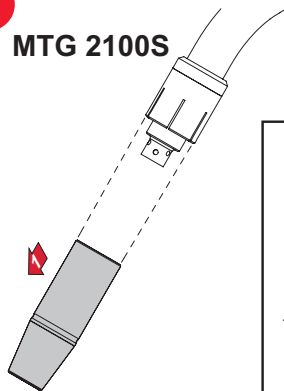



MTG 2500S

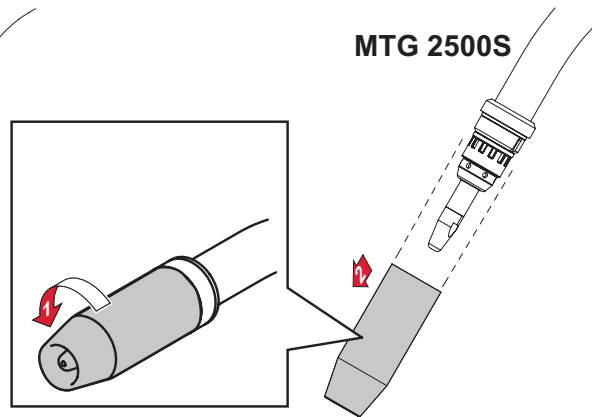


3

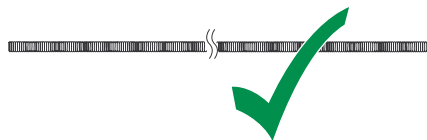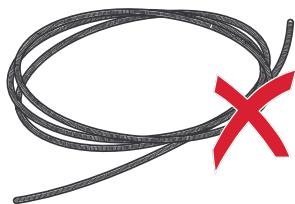

4

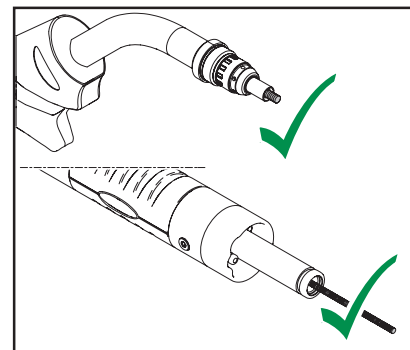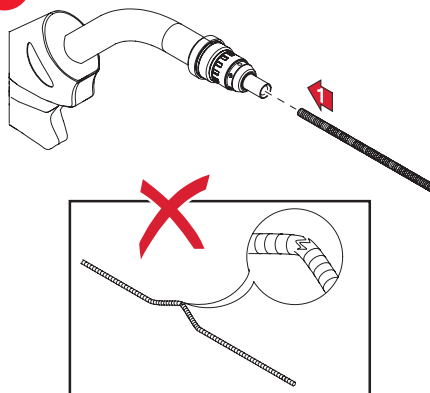


5

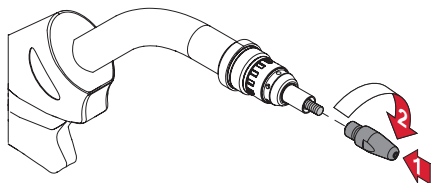


6


MTG 2100S

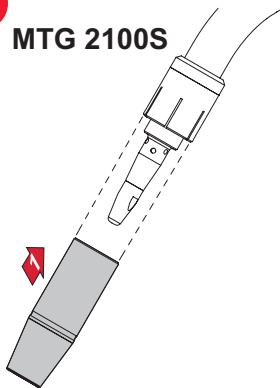


MTG 2500S

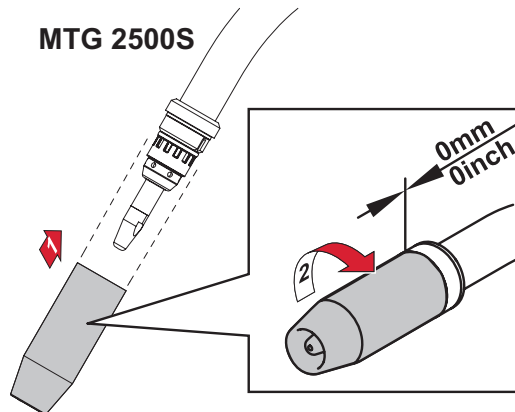


7

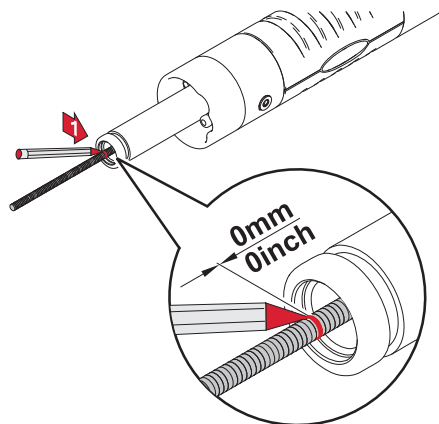

8

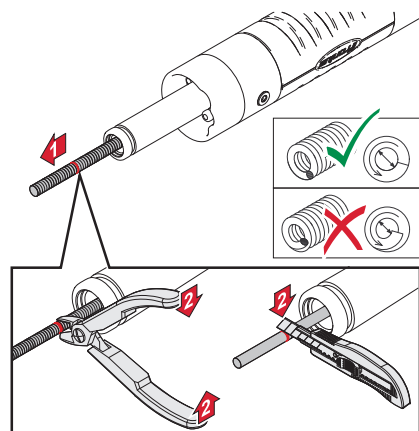

9

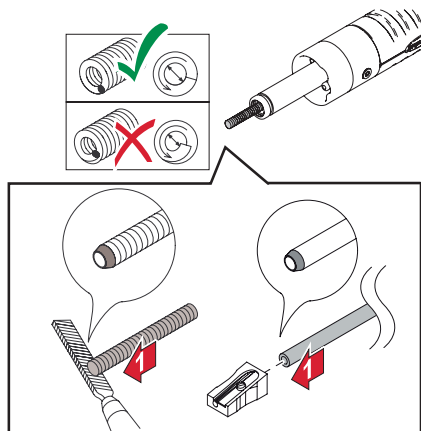

Ø
0,9-1,0mm
.035-.040 inch



Ø
0,6mm
.023 inch




Ø
1,2mm
.045 inch




Ø
0,8mm
.030 inch




10

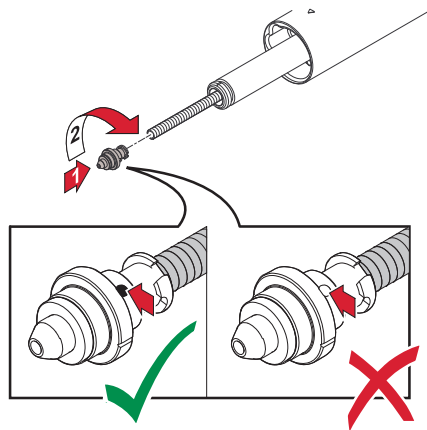


11

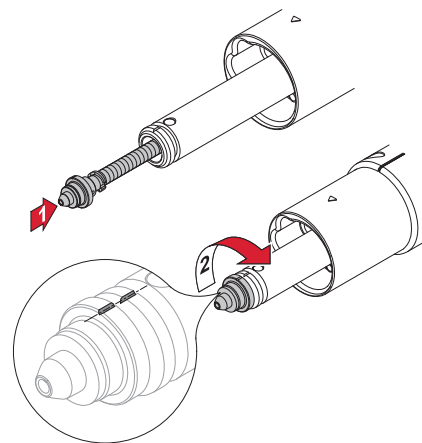


12

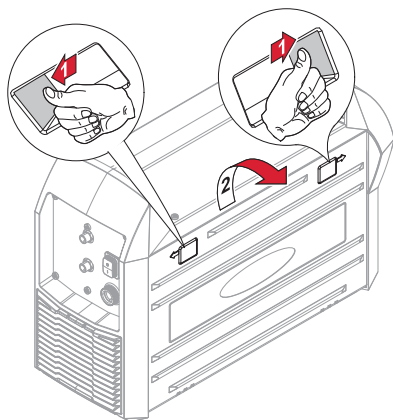


13

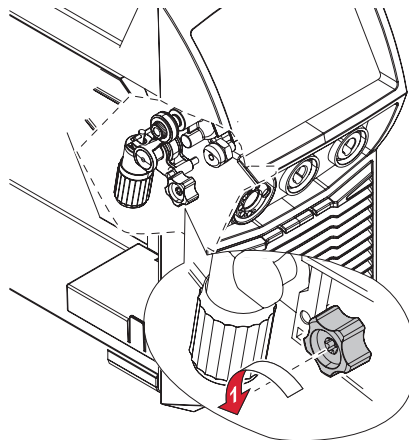


14

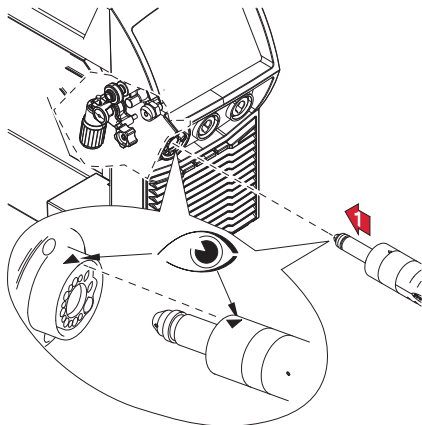


15

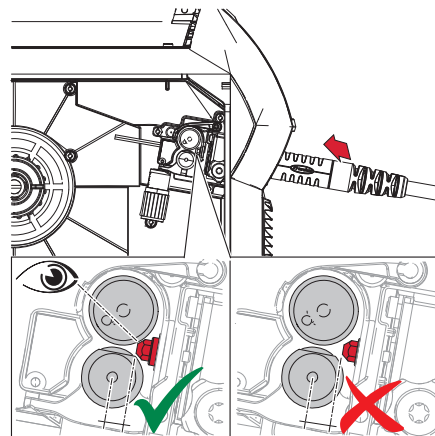



16

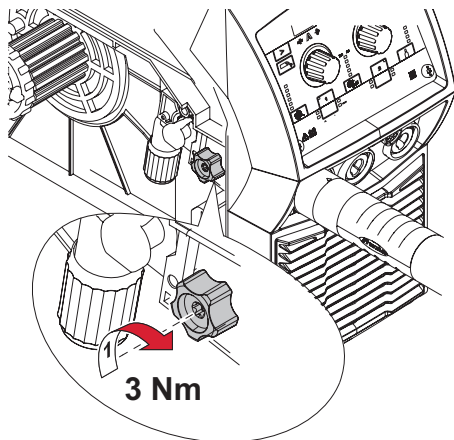


A D200

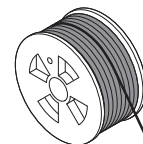


B D100




17

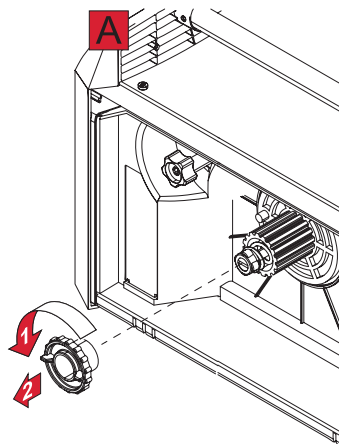


18

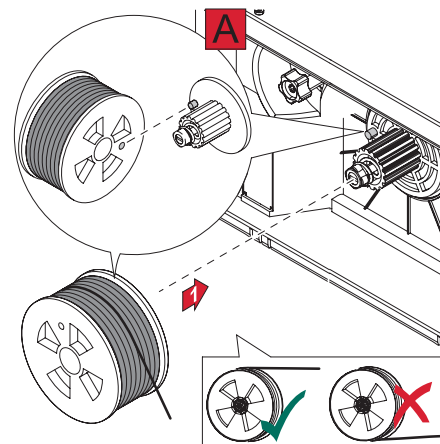


A

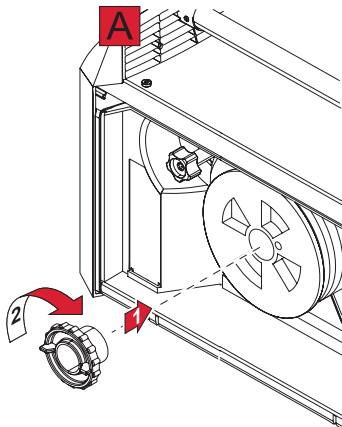


B

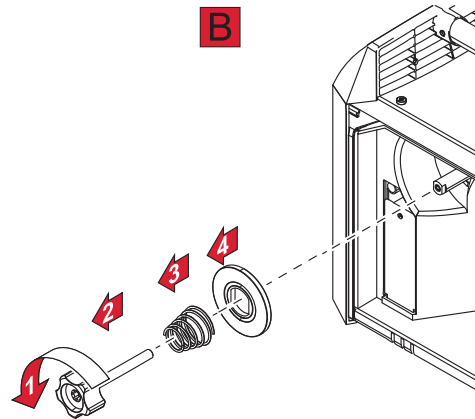

B

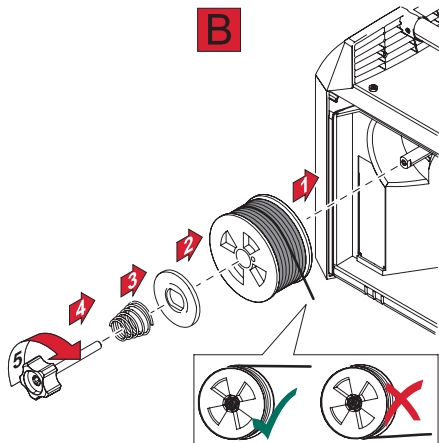


22

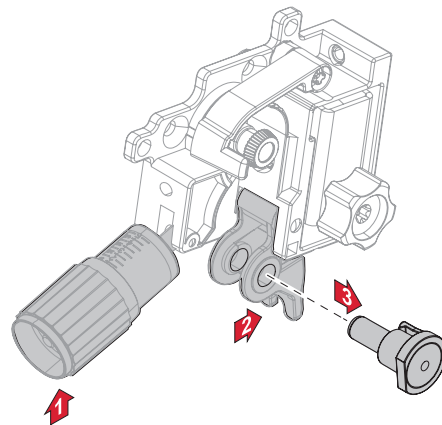





Steel, CrNi, Rutil FCW, Metal cored

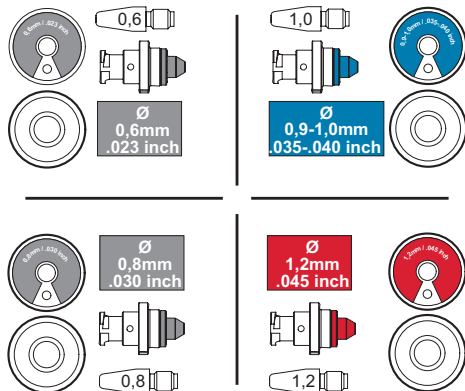


Alu, Self-shielded, CuSi

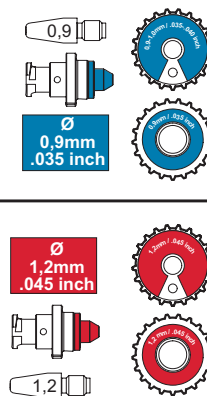


23

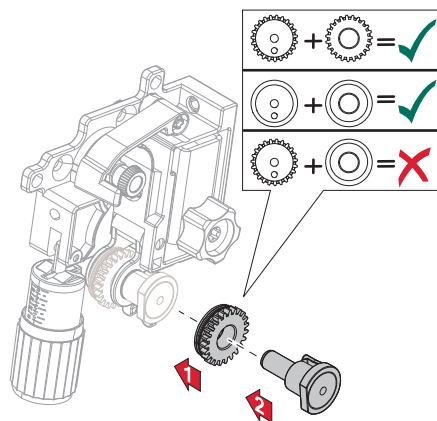


24

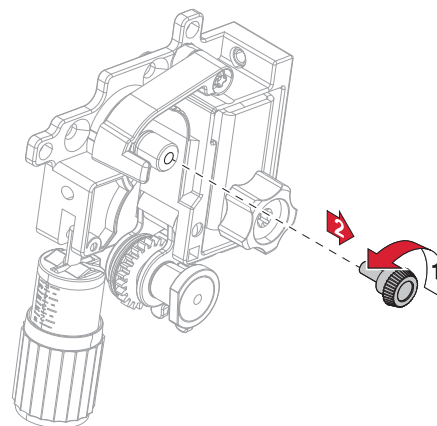


25

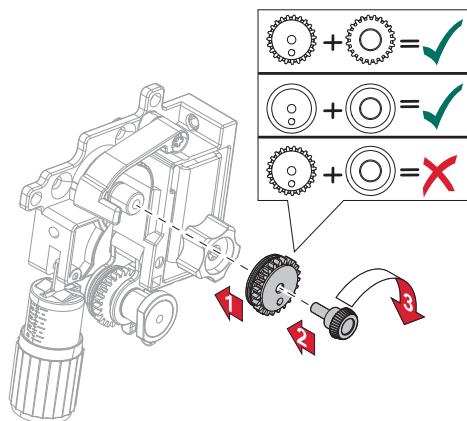


26

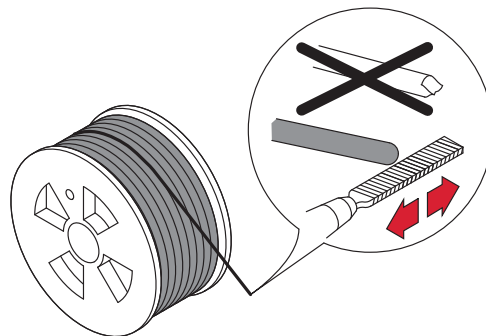


27

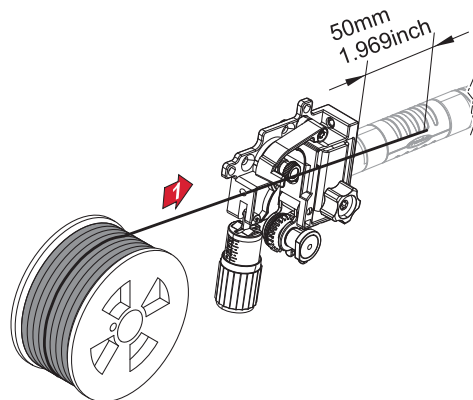


28

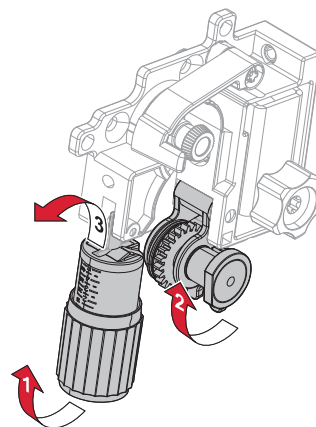


29

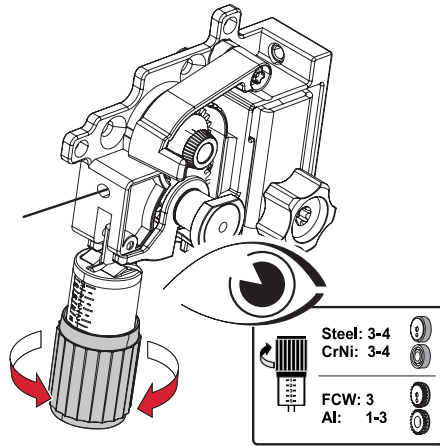


30

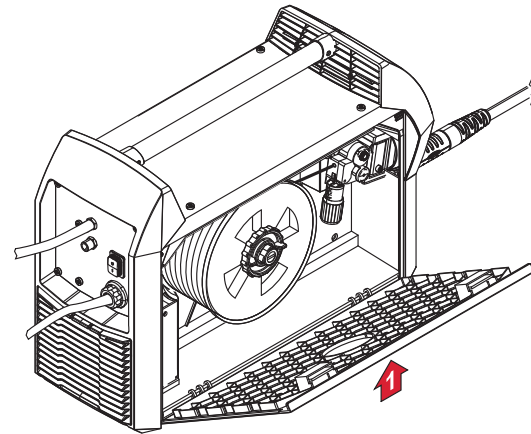


31

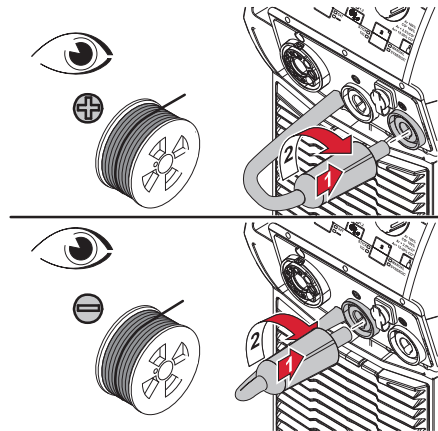


32

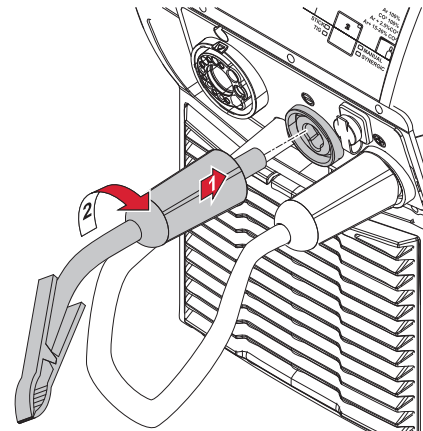


33

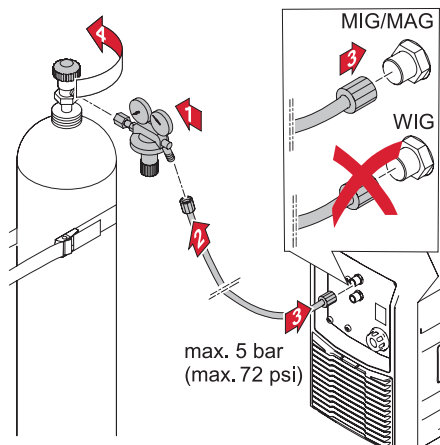


34

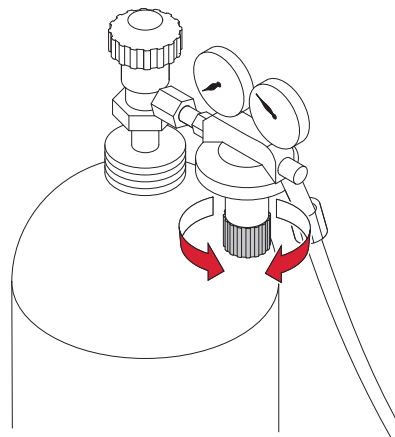

35

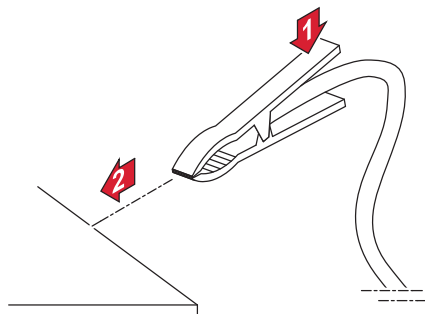


36

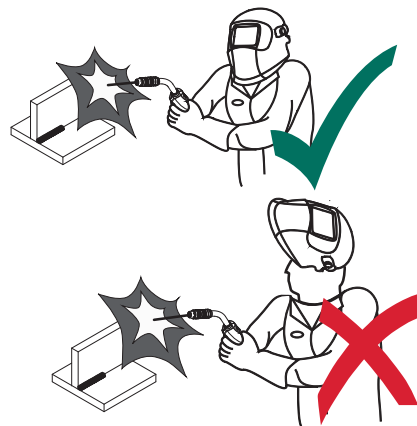


37


Only
TransSteel
2200 MV

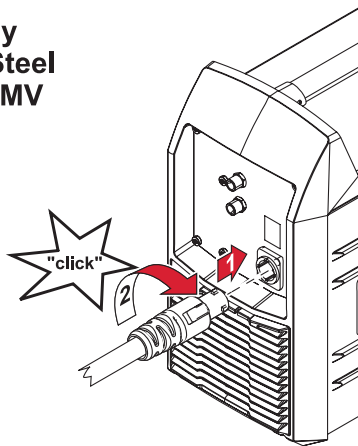

38

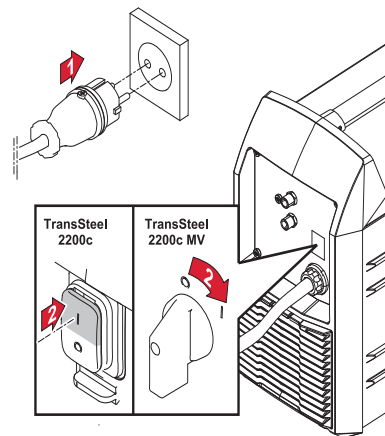

39

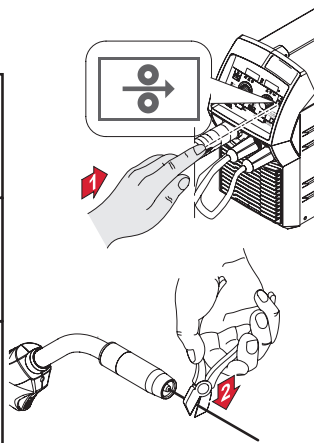

40




TransSteel 2200
Quick Guide to Synergic Welding

Safety
Before working with this device, ensure that you have read and understood all the documents provided in the bag and online. This document does not describe other features or the device for a complete description of the device, refer to the Operating instructions.

- Set the synergic welding process**
The synergic welding process is selected by the control panel. The synergic welding process is selected by the control panel. The synergic welding process is selected by the control panel.
- Set the flow control and shielding gas**
The flow control and shielding gas are selected by the control panel. The flow control and shielding gas are selected by the control panel. The flow control and shielding gas are selected by the control panel.
- Set the welding mode**
The welding mode is selected by the control panel. The welding mode is selected by the control panel. The welding mode is selected by the control panel.
- Set the welding power**
The welding power is selected by the control panel. The welding power is selected by the control panel. The welding power is selected by the control panel.
- Set the connection parameters**
The connection parameters are selected by the control panel. The connection parameters are selected by the control panel. The connection parameters are selected by the control panel.
- Optimize welding results**
The welding results are optimized by the control panel. The welding results are optimized by the control panel. The welding results are optimized by the control panel.


QR Code
Scan the QR code to access the online documentation.

41

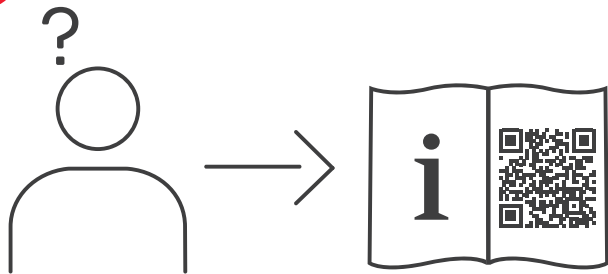


<https://manuals.fronius.com/html/4204260241>


1

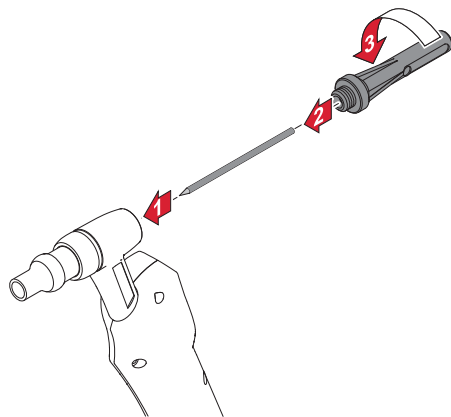


2

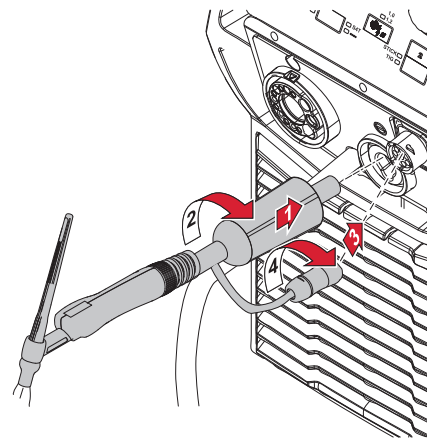


3

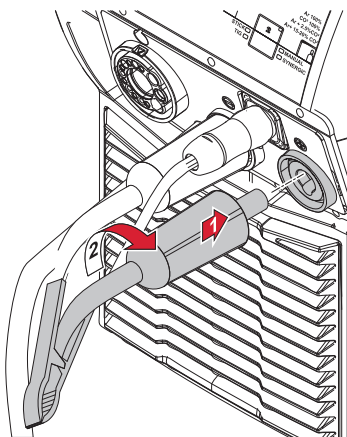


4

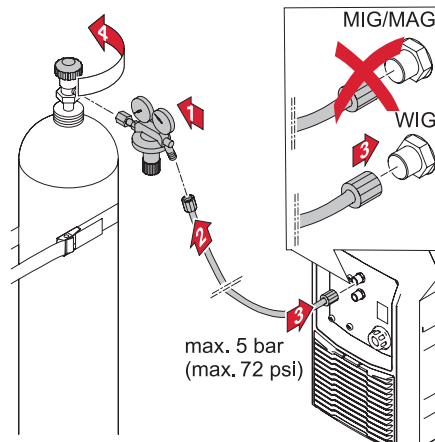


5

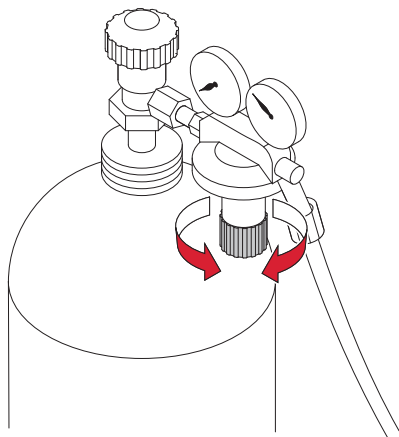

6

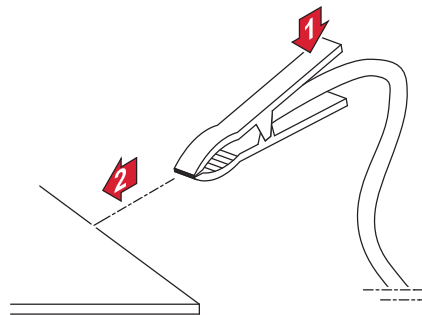


7

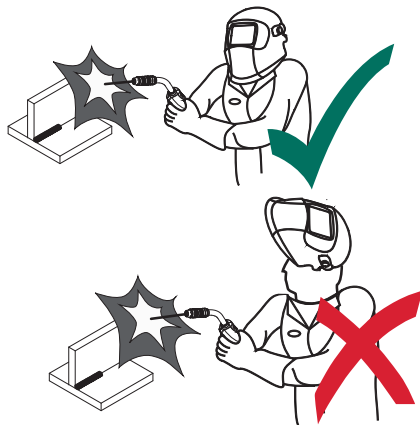


8


Only
TransSteel
2200 MV

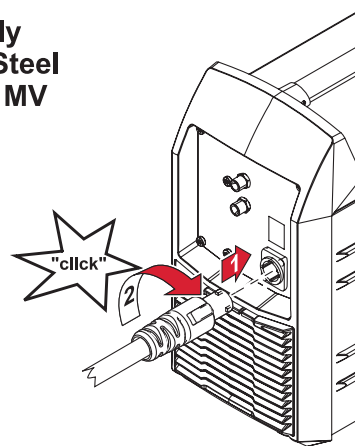


9

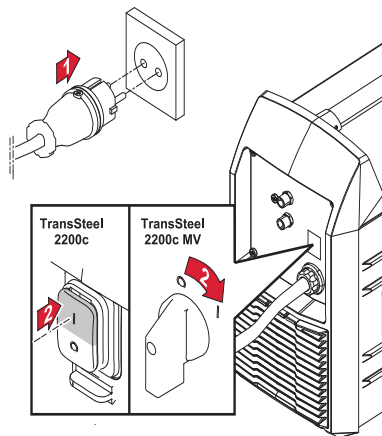

10

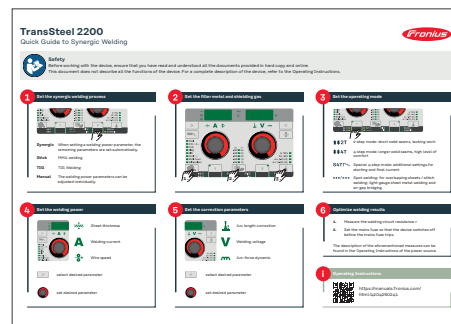


11

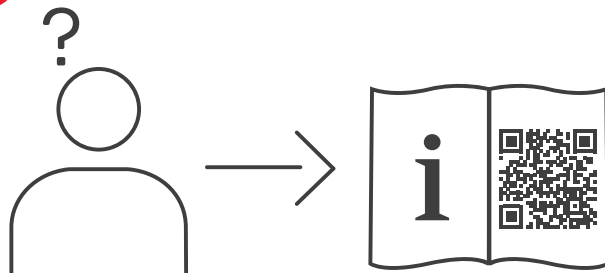


<https://manuals.fronius.com/html/4204260241>


1

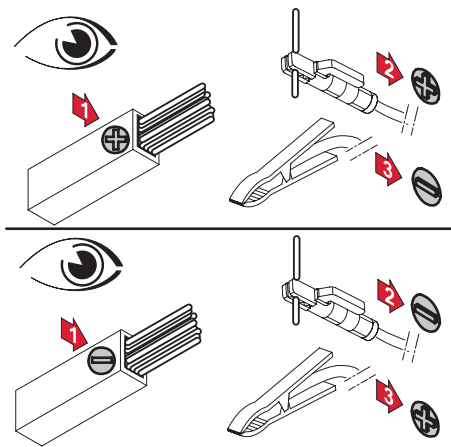


2

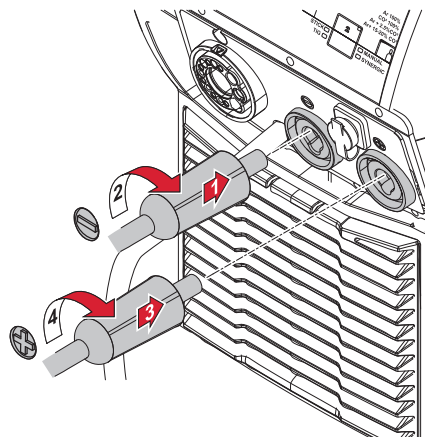

3

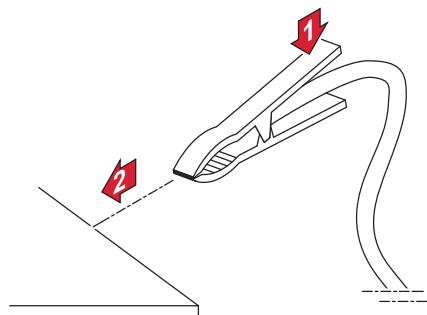


4

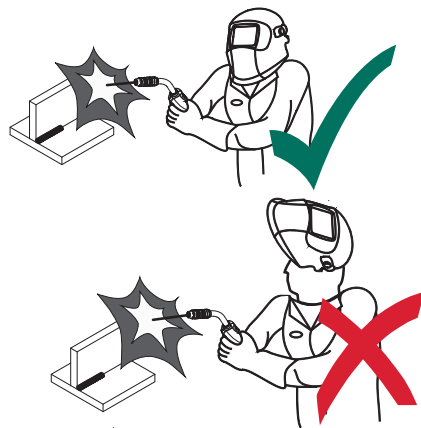


5


Only
TransSteel
2200 MV

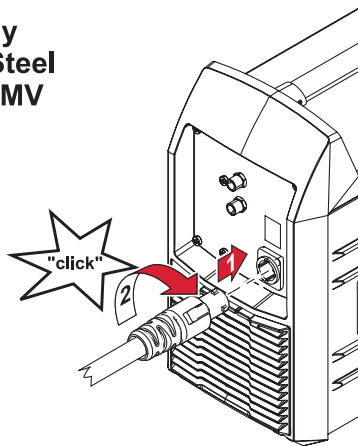


6

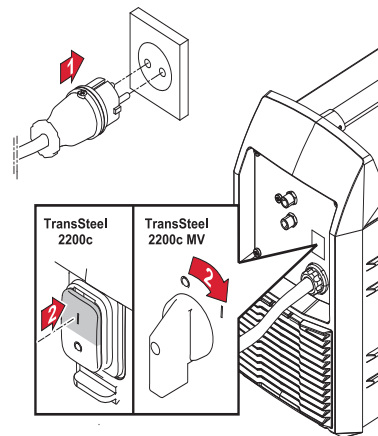

7

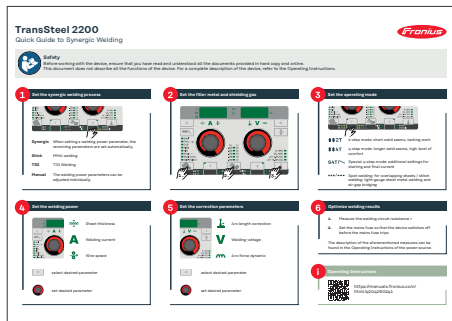


8

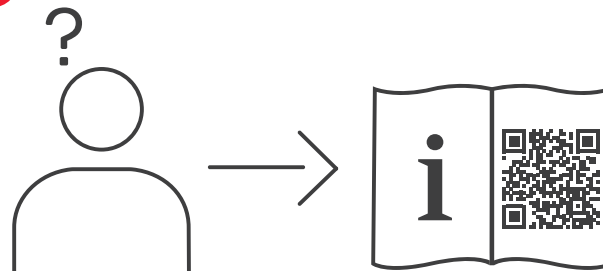


<https://manuals.fronius.com/html/4204260241>




1

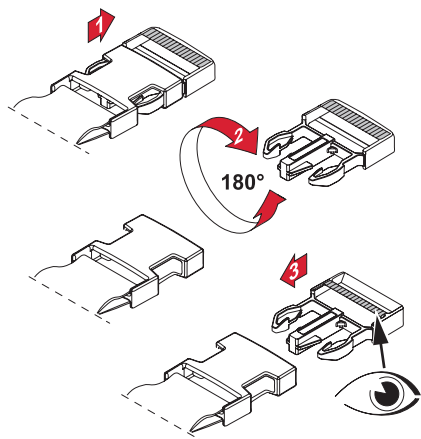


2

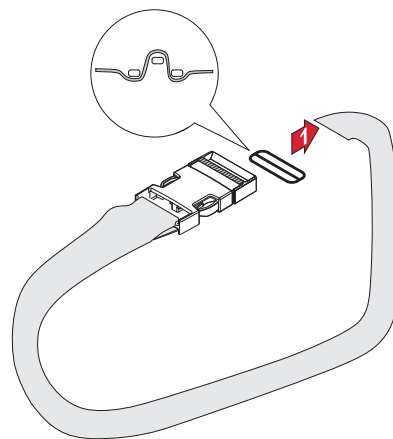

3

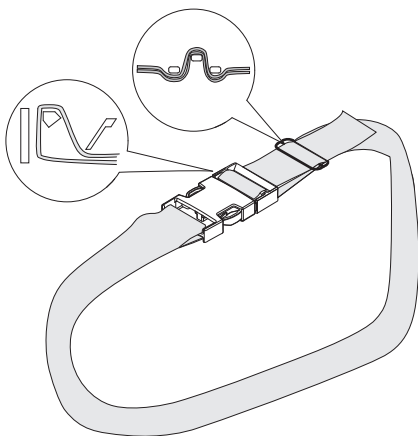


4

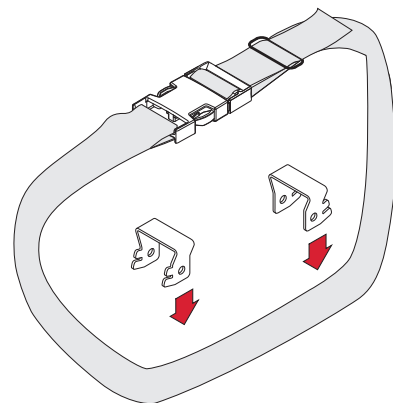




5

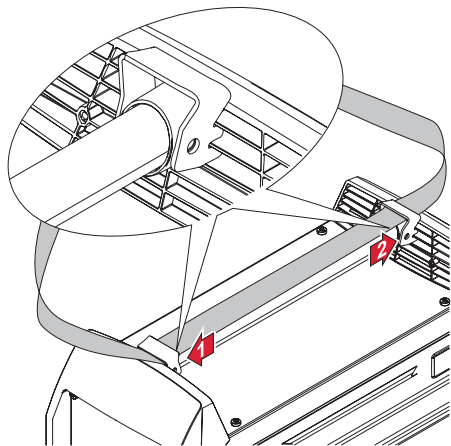

6

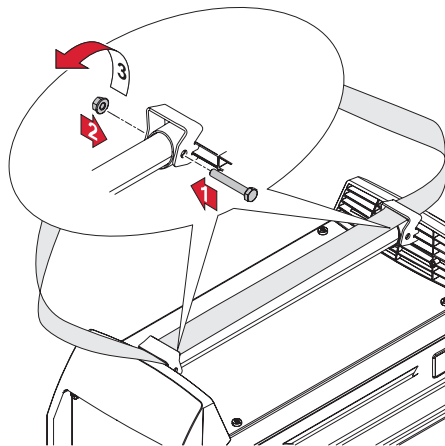



Fronius International GmbH

Froniusstraße 1
4643 Pettenbach
Austria
contact@fronius.com
www.fronius.com

Under www.fronius.com/contact you will find the addresses
of all Fronius Sales & Service Partners and locations.